


INVERTED EUROMAX MIRROR

CAMERA REPLACEMENT INSTRUCTIONS

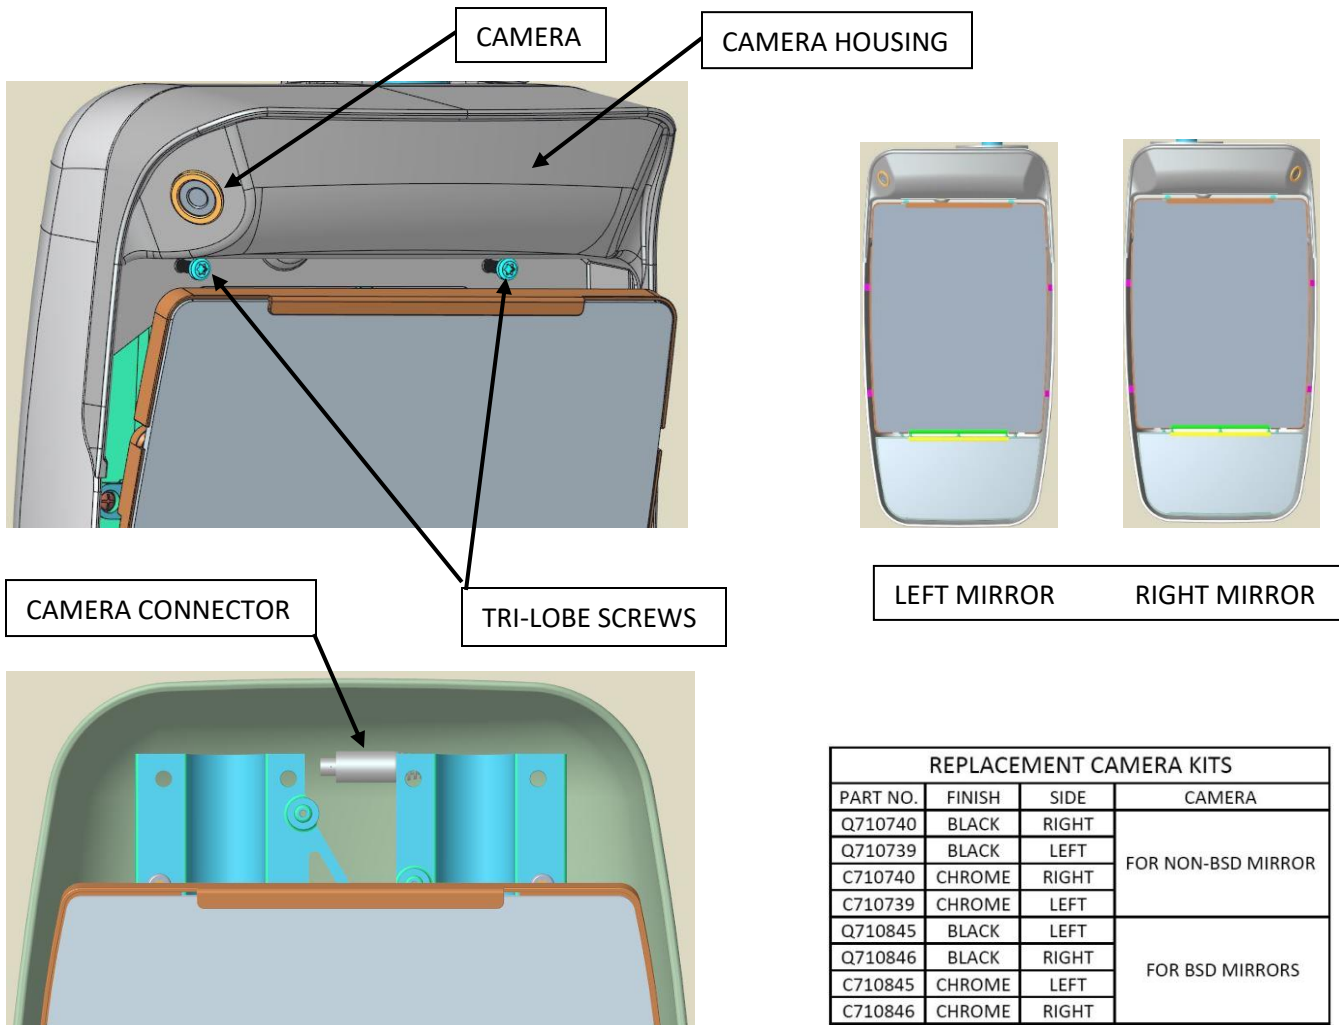

REPLACEMENT CAMERA KITS			
PART NO.	FINISH	SIDE	CAMERA
Q710740	BLACK	RIGHT	FOR NON-BSD MIRROR
Q710739	BLACK	LEFT	
C710740	CHROME	RIGHT	
C710739	CHROME	LEFT	
Q710845	BLACK	LEFT	FOR BSD MIRRORS
Q710846	BLACK	RIGHT	
C710845	CHROME	LEFT	
C710846	CHROME	RIGHT	

TOOLS REQUIRED: T20 TORQUE BIT WITH MAGNETIC DRIVER

NOTE: THE CAMERA CAN BE REPLACED WITH THE MIRROR HEAD ATTACHED TO THE MIRROR ARM OR MIRROR BASE.

NOTE: IF THE BLIND SPOT MIRROR DOES MOVE THEN RECALIBRATE THE SYSTEM AND FOLLOW INSTRUCTIONS 2701555.

STEP1: MOVE THE FLAT GLASS DOWN TO THE GROUND BY USING THE MOTOR SWITCH.

STEP #2 REMOVE THE TWO TRI-LOBE SCREWS (SAVE THE SCREWS).

STEP #3 LIFT THE CAMERA HOUSING OFF OF THE MIRROR AND UNPLUG THE CAMERA CONNECTORS.

STEP #4 PLUG IN THE NEW CAMERA. STRETCH THE RUBBER BOOT OVER BOTH CONNECTORS.

STEP #5 INSTALL THE NEW CAMERA HOUSING AND THE TWO TRI-LOBE SCREWS. TORQUE SCREWS TO 15-25 IN/LBS. CAUTION DO NOT OVERTIGHTEN.