

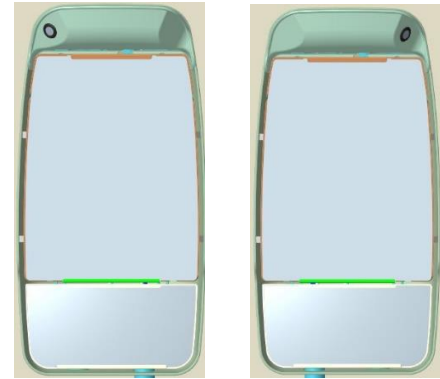


## CAMERA REPLACEMENT INSTRUCTIONS

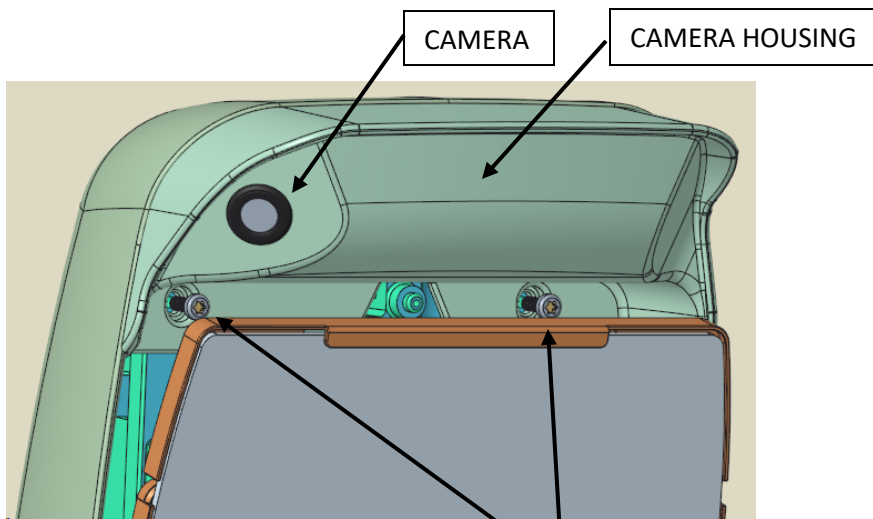

LEFT MIRROR

RIGHT MIRROR

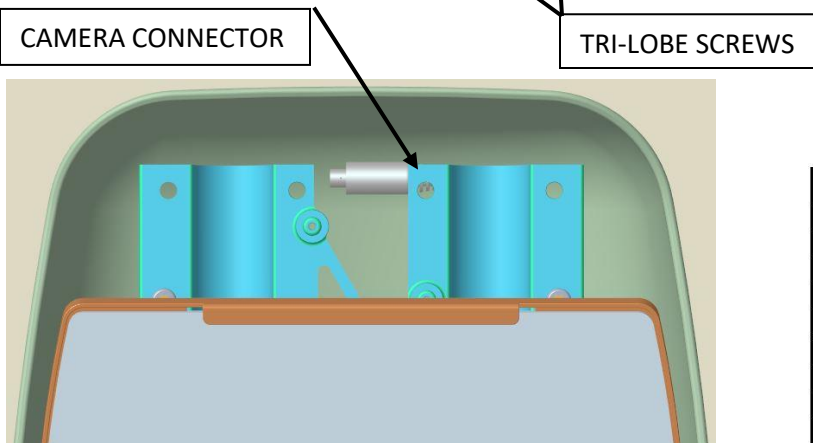

REPLACEMENT CAMERA KITS			
PART NO.	FINISH	SIDE	CAMERA
Q710756	BLACK	RIGHT	FOR NON-BSD MIRROR
Q710757	BLACK	LEFT	
C710756	CHROME	RIGHT	
C710757	CHROME	LEFT	
Q710791	BLACK	LEFT	FOR BSD MIRRORS
Q710792	BLACK	RIGHT	
C710791	CHROME	LEFT	
C710792	CHROME	RIGHT	

**TOOLS REQUIRED: T20 TORQUE BIT WITH MAGNETIC DRIVER**

**NOTE: THE CAMERA CAN BE REPLACED WITH THE MIRROR ATTACHED TO THE MIRROR ARM OR MIRROR BASE.**

**NOTE: IF THE BLIND SPOT MIRROR DOES MOVE THEN RECALIBRATE THE SYSTEM AND FOLLOW INSTRUCTIONS 2701555.**

**STEP1: MOVE THE FLAT GLASS DOWN TO THE GROUND BY USING THE MOTOR SWITCH.**

**STEP #2 REMOVE THE TWO TRI-LOBE SCREWS (SAVE THE SCREWS).**

**STEP #3 LIFT THE CAMERA HOUSING OFF OF THE MIRROR AND UNPLUG THE CAMERA CONNECTORS.**

**STEP #4 PLUG IN THE NEW CAMERA. STRETCH THE RUBBER BOOT OVER BOTH CONNECTORS.**

**STEP #5 INSTALL THE NEW CAMERA HOUSING AND THE TWO TRI-LOBE SCREWS. TORQUE SCREWS TO 15-25 IN/LBS. CAUTION DO NOT OVER TIGHTEN.**