


REVISIONS		
	PROJECT # 3887	
▲ 01	03-15-18	JS

FUNCTIONAL REVISIONS
 ALL REVISIONS WITH SOLID
 TRIANGLE ARE USABLE

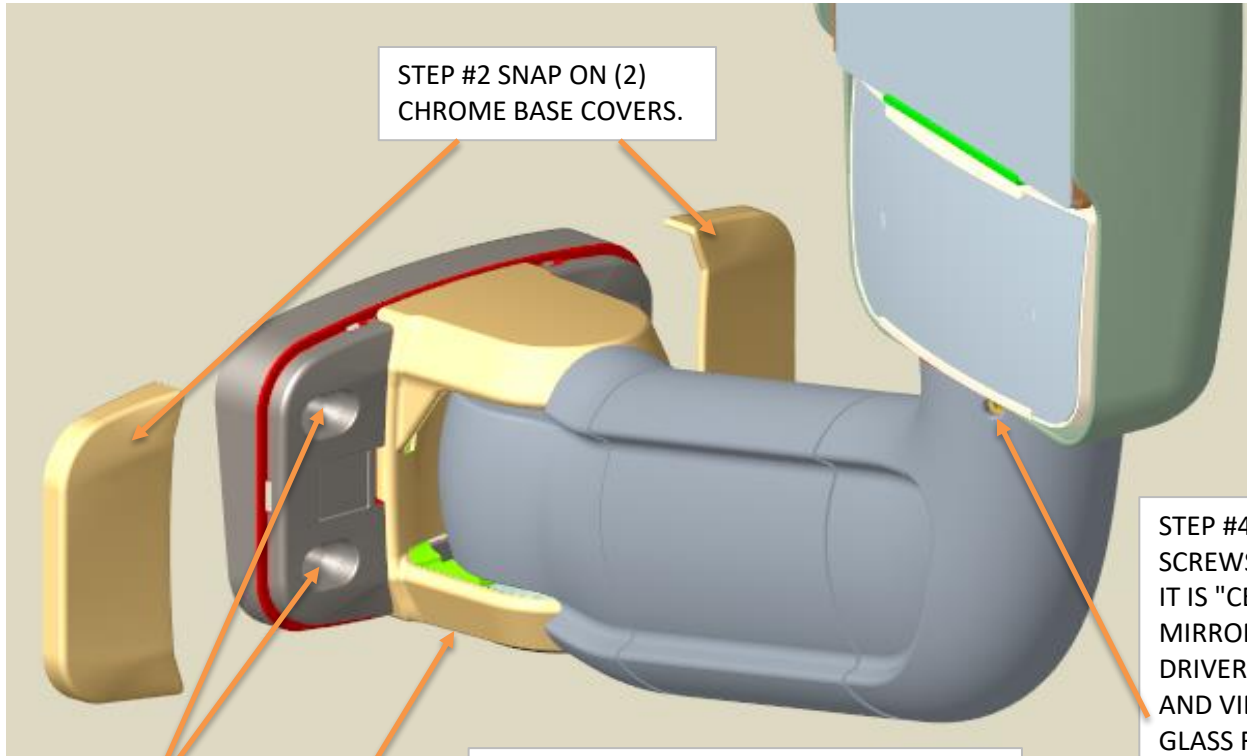

STEP #2 SNAP ON (2)
 CHROME BASE COVERS.

STEP #4 LOOSEN BOTH SET
 SCREWS. MOVE THE GLASS SO
 IT IS "CENTERED IN THE
 MIRROR SHELL". WITH A
 DRIVER IN SEATED POSITION
 AND VIEWING THE MIRROR
 GLASS ROTATE THE HEAD FOR
 OPTIMUM VIEWING ALONG
 SIDE OF THE VEHICLE.
 TORQUE THE SET SCREWS TO

STEP #3 MIRROR ARM ANGLE IS FACTORY
 SET. ROTATE THE ARM FORWARD AND
 BACKWARD MAKING SURE IT SNAPS INTO
 THE "HOME POSITION"

STEP #1 MOUNT THE MIRROR
 BASE USING (4) 5/16-18 CAP
 SCREWS AND LOCKNUTS.
 HARDWARE NOT INCLUDED.

NOTE: THE MIRROR PIVOT
 BOLT IS FACTORY SET AND
 SHOULD NOT BE TOUCHED.

PROPRIETARY
 THIS CONCEPT & DRAWING IS THE
 PROPERTY OF VELVAC, INC. AND
 SHALL NOT BE REPRODUCED,
 COPIED, DISCLOSED, USED FOR
 THE MANUFACTURE OR
 PROCUREMENT FROM SOURCES
 OTHER THAN VELVAC INC.
 WITHOUT WRITTEN PERMISSION
 FROM VELVAC INC.



SCALE: x x	DRAWN BY: J.S.
DATE: 03-15-18	XXXX

INSTRUCTION SHEET FOR 2030XL MIRROR ASSY'S WITH SPRING PIVOT	7201062
--	---------